



# Sony ICF-C1T Tuner Dial Replacement

When the device is not getting satisfactory reception and you have tried everything else (moving location of device), this guide will help you to replace a defaulty tuner dial.

Written By: Megan



## INTRODUCTION

This guide gives step-by-step instructions on replacing the tuner dial of your device.




### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)




### PARTS:


- [New tuner dials](#) (1)
-

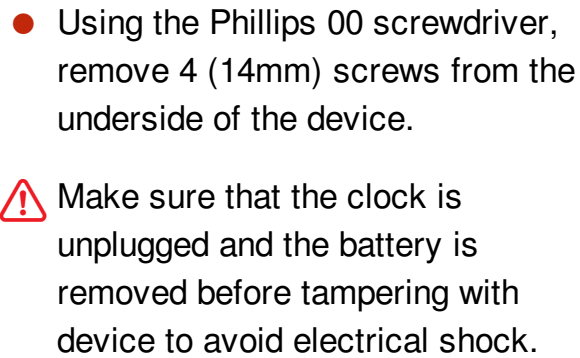

## Step 2

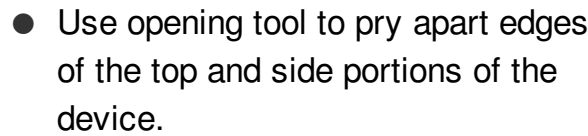

## Step 3

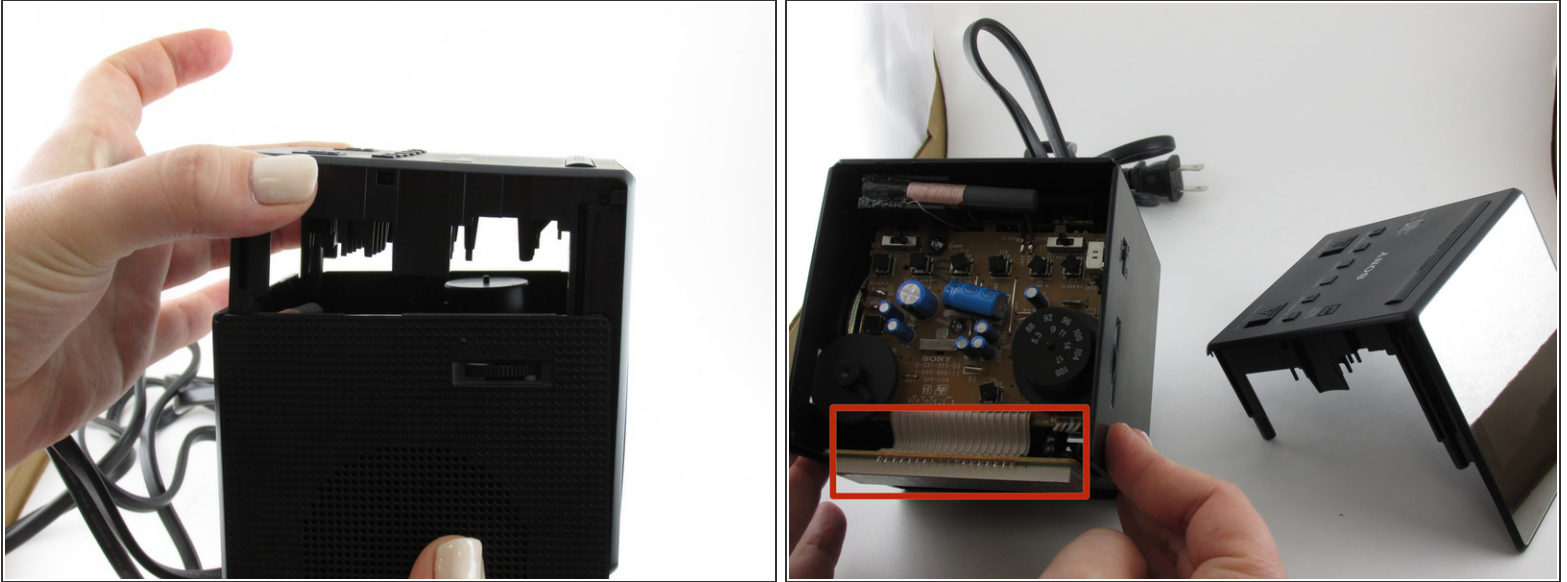


- Carefully separate device by gently pulling up on the top portion.

⚠ Be sure to use caution when pulling device apart as the clock display is located close to the front face plate and connected by multiple wires.





## Step 4

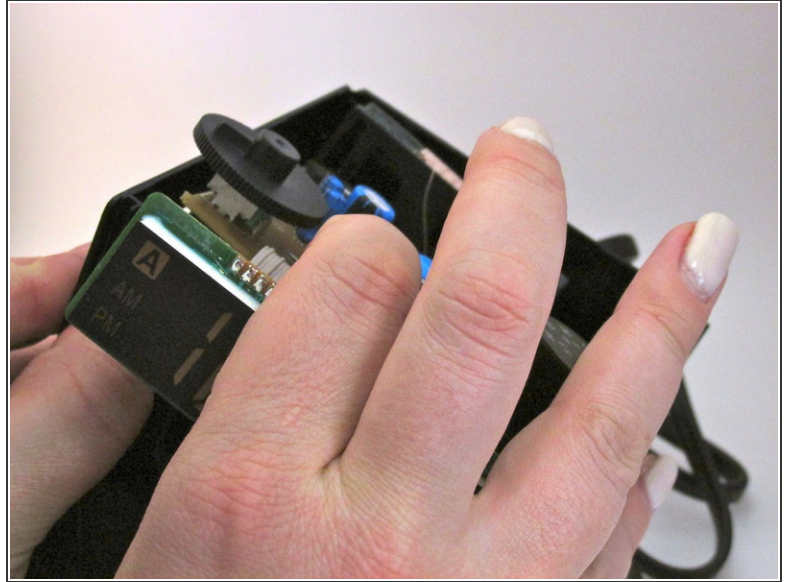

- To remove the motherboard, gently pull apart the sides of the device.
- ⚠ Do not pull hard on motherboard, as it is still connected by multiple wires inside the device.
- ⚠ Be careful of sharp pieces on the motherboard.
- ℹ It would be helpful, although not necessary, to have someone helping out with this step.

## Step 5

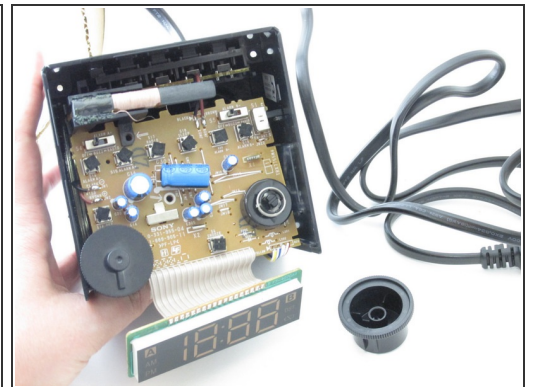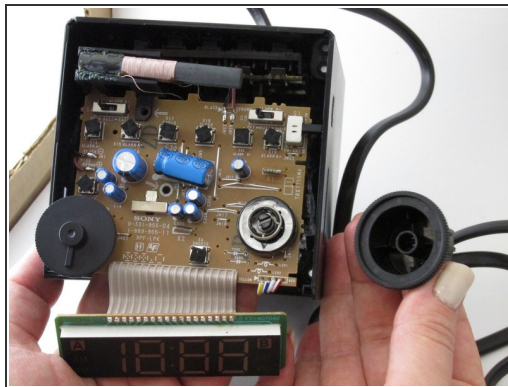

- Remove tuner dial by pulling it off of motherboard. This can take a little force to remove.

To reassemble your device, follow these instructions in reverse order.

